



## Accu-Tilt Installation Guide

### ***Before you begin:***

- The Accu-Tilt has been engineered to visually indicate mast angle and enable lift truck operators to more precisely control the level of forks or attachments, such as carton and paper roll clamps.
- The Accu-Tilt will easily install on most tilting mast type lift trucks and is usually mounted on the left side at operator eye level.
- The Accu-Tilt can also be mounted on the right, if objects such as hoses, hose reels or cylinders obstruct the mounting location.
- Make sure the Accu-Tilt is not in contact with hydraulic hoses and does not block access to bolts or fittings. If you must install the Accu-Tilt over any inspection or safety decals, please contact your service provider for replacements.

### ***Installation Instructions:***



#### ***Step 1: Clean the mast area***

Locate and mark suitable location. Thoroughly clean area and wipe down with provided alcohol pad.



#### ***Step 2: Applying the adhesive double-sided tape***

Apply pad of the adhesive tape to the Accu-Tilt side that will be joined to the forklift mast.



#### ***Step 3: Applying the Accu-Tilt***

Angle the Accu-Tilt so the raised edge rests against the mast. Once straight, push the entire unit against the mast so the adhesive tape comes in contact with the mast.





**IDEAL WAREHOUSE**  
INNOVATIONS INC

Protecting Your People



#### **Step 4: Using stickers to customize Accu-Tilt**

The Accu-Tilt comes with a wide range of stickers to customize the unit.



#### **Step 5: Placing the "Level" sticker**

Level the forks using the green line on the Accu-Tilt. Place a level on the forks to ensure the forks are level. Due to carriage or fork wear, the forks may not be level. Place the Level sticker on the Accu-Tilt according to the level gauge.



#### **Step 6: Placing the "Travel" sticker**

When travelling, the forks should be slightly tilted back. Adjust the forks to the desired angle and place the sticker beside the indicator needle.



#### **Step 7: Placing the "Park" sticker**

When the forklift is parked, the forks should be slightly tilted forward with tips touching the floor. Place the desired sticker beside the indicator needle.

#### **Step 8: The Accu-Tilt is now installed**

Be sure to only read the Accu-Tilt when the forklift is stopped.

Questions: Contact Ideal Warehouse Innovations  
1-866-828-6737 or [info@idealwarehouse.com](mailto:info@idealwarehouse.com)