



# ARROW BLUE

## Pedestrian Warning Light

## Installation and Operation Instructions

### ARROW BLUE - Pedestrian Warning Light

**IMPORTANT!** Read all instructions before installing and using the Arrow Blue Pedestrian Warning Light. Installer: These instructions must be delivered to the end user.

## WARNING

Incorrect installation or use of this product according to the manufacturer's recommendations may result in property damage, serious bodily/personal injury, or death to you and those around you.



**Do not install and/or operate this product unless you have read and understand the safety information contained in this manual.**

- Proper installation combined with operator training in the installation, use, care and maintenance of the Arrow Blue Pedestrian Warning Light is essential to ensure the safety of you and those around you.
- Exercise caution when working with live electrical connections.
- This product must be grounded. Not properly grounding this product or shorting of electrical connections can cause high current arcing, which can cause serious damage to the vehicle including fire or serious injury.
- Proper placement and installation of the Arrow Blue Light is vital to the performance of the product. Install this product so that the output performance of the system is maximized and that the controls are within reach of the operator at all times.
- It is the responsibility of the operator to make sure that the Arrow Blue Light is in proper working condition. Also it is his responsibility to ensure that the beam of light is not blocked by any other vehicle components.
- The manufacturer assumes no liability for any loss resulting from the use of this device.

**NOTE:** The black die cast Aluminum housing gets hot to the touch after operating for a few hours.

### Specifications:


Specifications available upon request.

### Wiring Instructions:

Black Wire: Ground

Red Wire: Connect to fused power.

See wiring diagram for further instructions

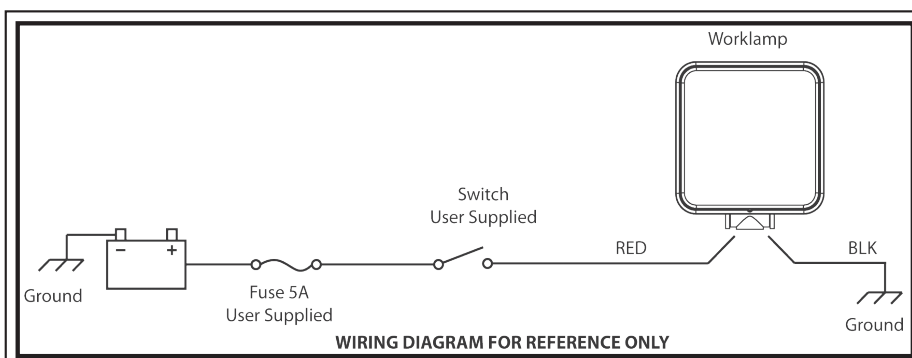

### Installation:

1. Select a mounting location for the unit on the front or back of the forklift.
2. Attach mounting bracket to bottom bolt of the unit and tighten.
3. Attach bracket and unit to the location using the double sided tap and straps provided with the unit.
4. Adjust the beams location once mounted to the forklift.